

Carcopolo Installation Manual for OBD Devices:

We mainly use three types of devices. One is an OBD device and other two are portable device and wired device.

Carcopolo OBD Devices:

This device should be connected to an OBD port built into your car. This device installation is very simple and easy. The port where need to connect the device is under the steering wheel, under the dashboard or around the gear box. Sometimes, it may be hidden under some flap cover in the driving sit area. The port is like the picture below




Our device is Teltonika FMB 001:



How to insert Micro-SIM card and connect battery


1. Gently remove FMB001 **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read **security info** how to enter it later in **Configurator**. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect battery as shown to device. Position the battery in place where it does **not obstruct other components**.
4. Attach device **cover** back.

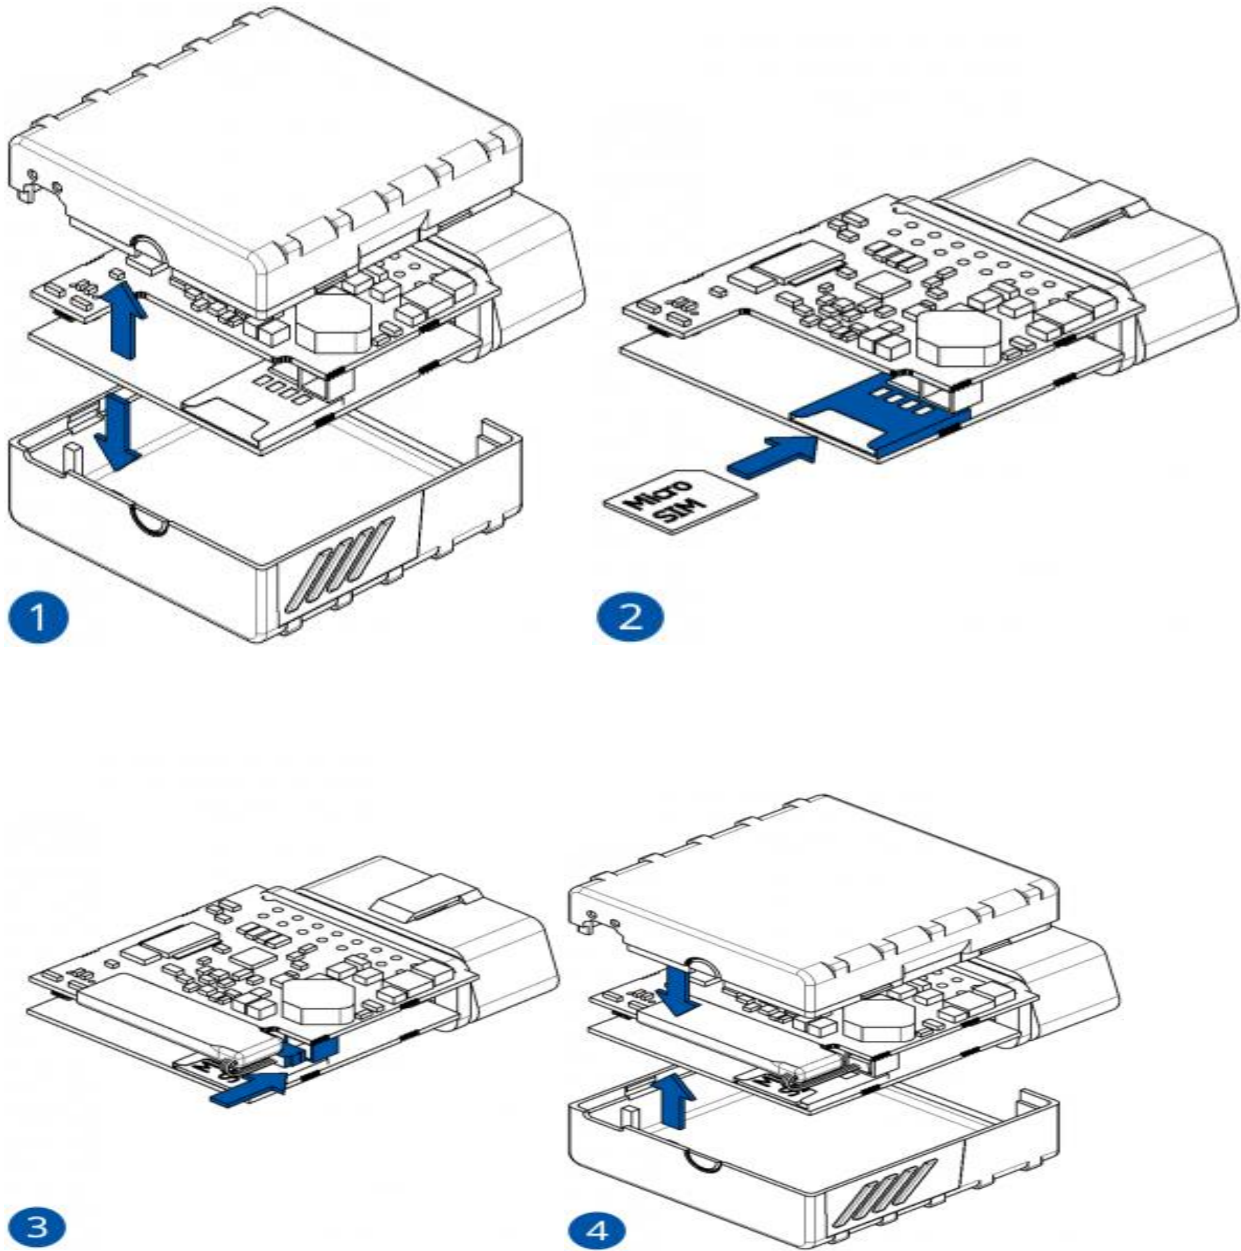

How to insert SD card into FMB001

Insert SD card as shown.

NOTE: SD cards are only used in devices manufactured until **2018-04**. Newer devices have internal flash memory.

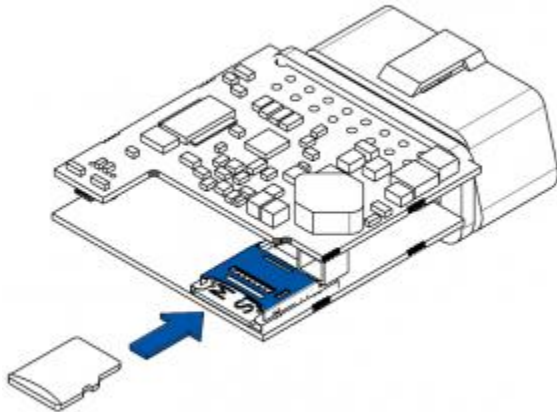


Installing FMB001 drivers

Connect the device to power supply



If LED's are blinking then the device is working.

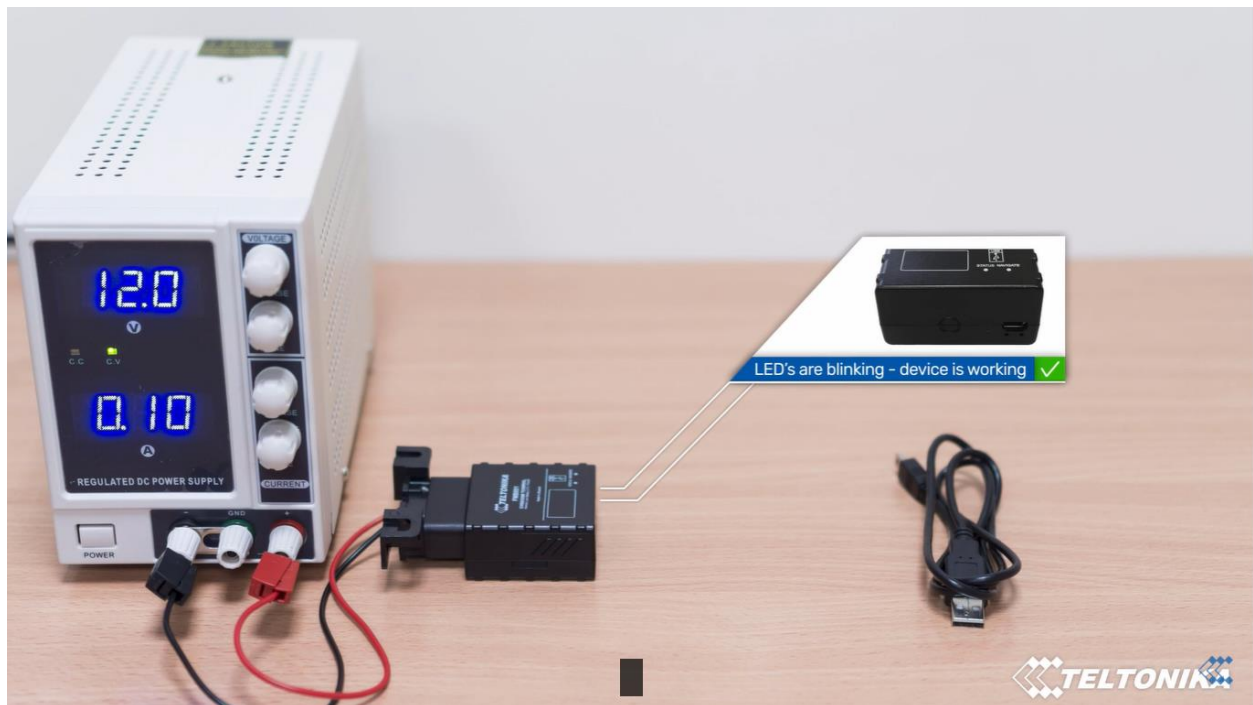



Connect MINI USB plug to device




Add the USB plug to a computer. To configure the OBD device first download the zip file from the given link and extract it on your preferred folder.

https://drive.google.com/drive/folders/1T7cXM_q73MIi8DyiKBHyE3ukS87uE3Xs?usp=sharing

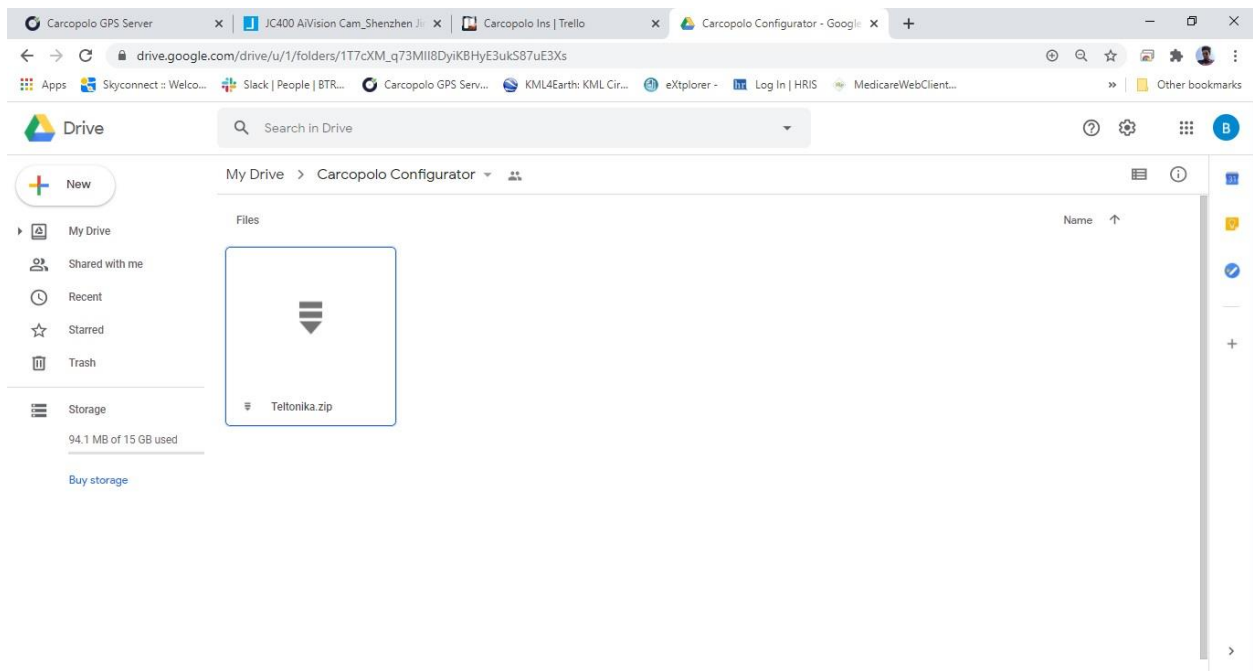


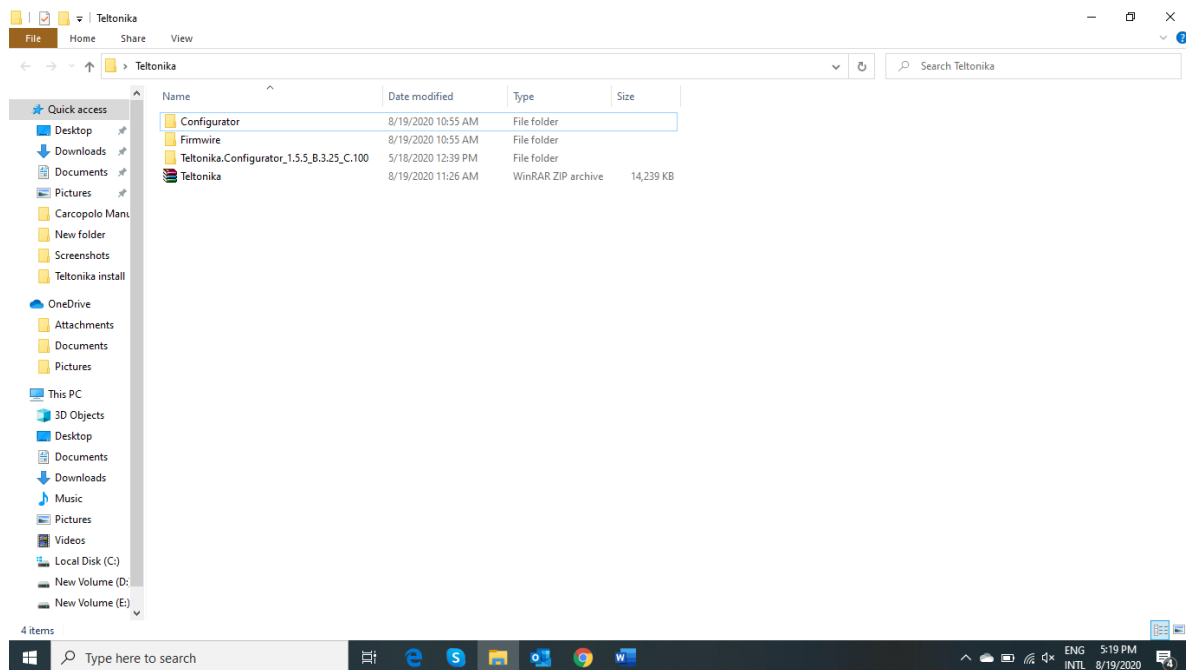


Then select the “Teltonika.Configurator” from the “Teltonika.Configurator_1.5.5_B.3.25_C.100” folder from the extracted files.

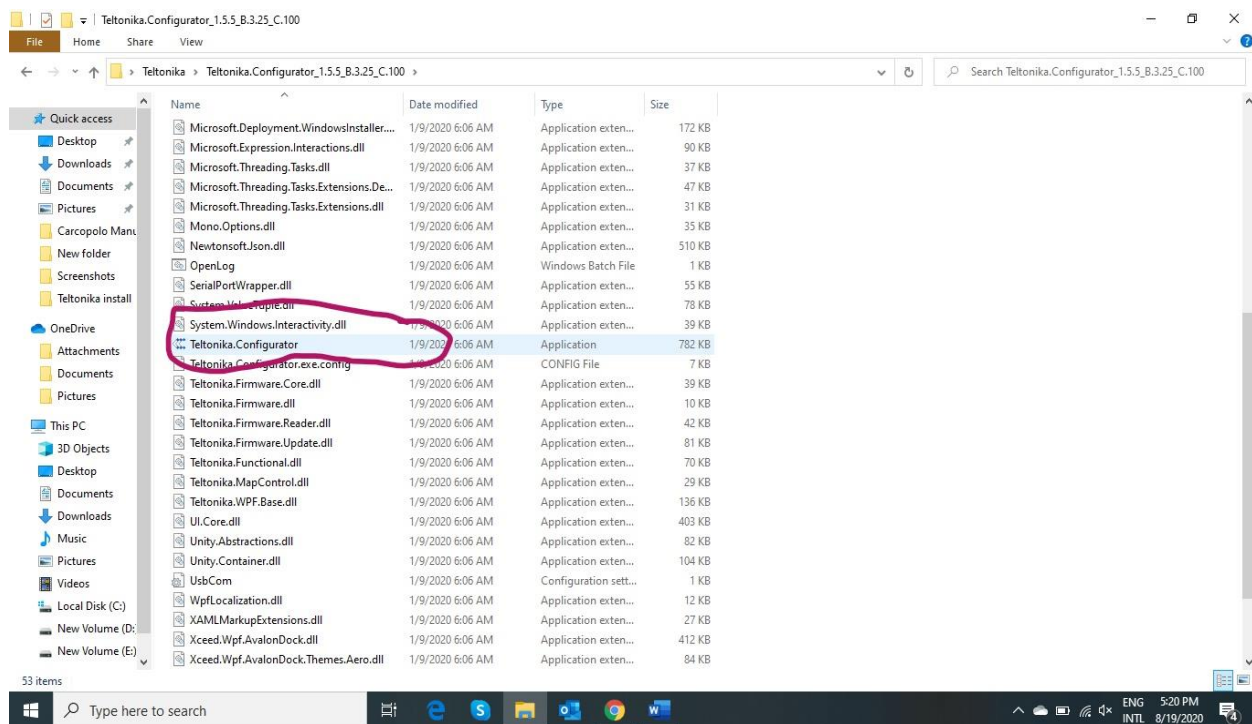


Now this page will show after launching the Configurator:

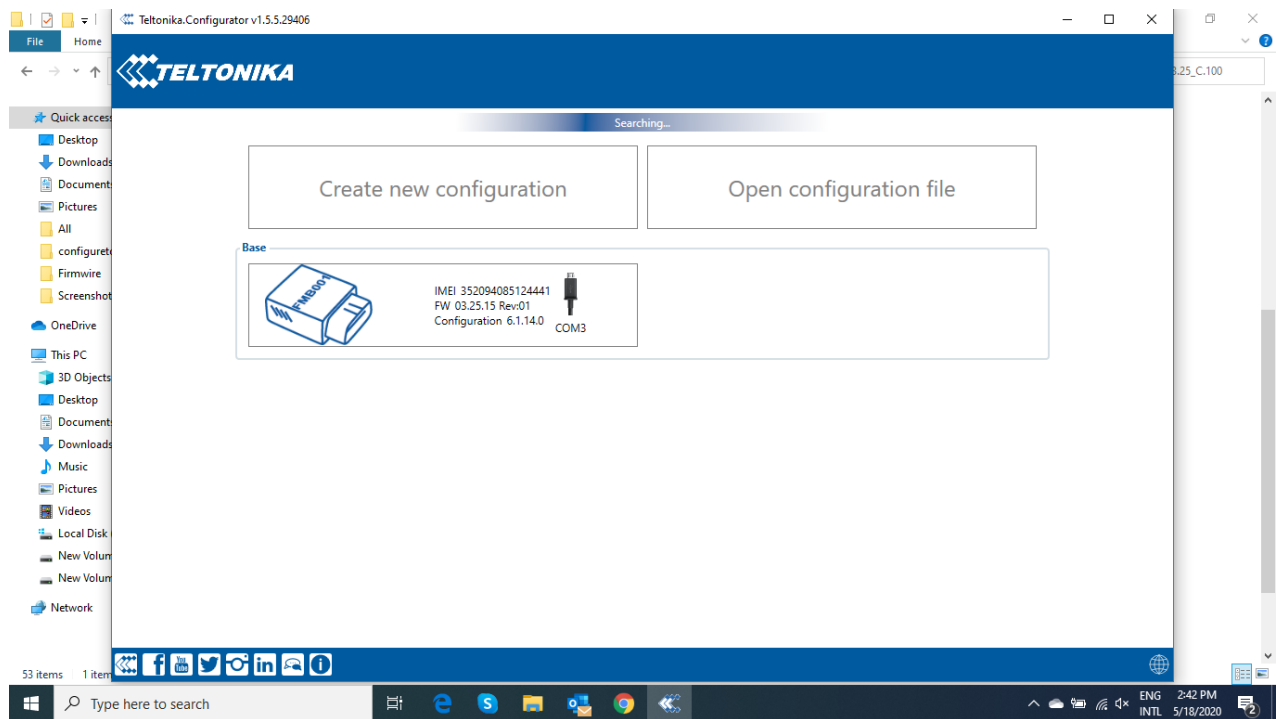


Click on the configured device,

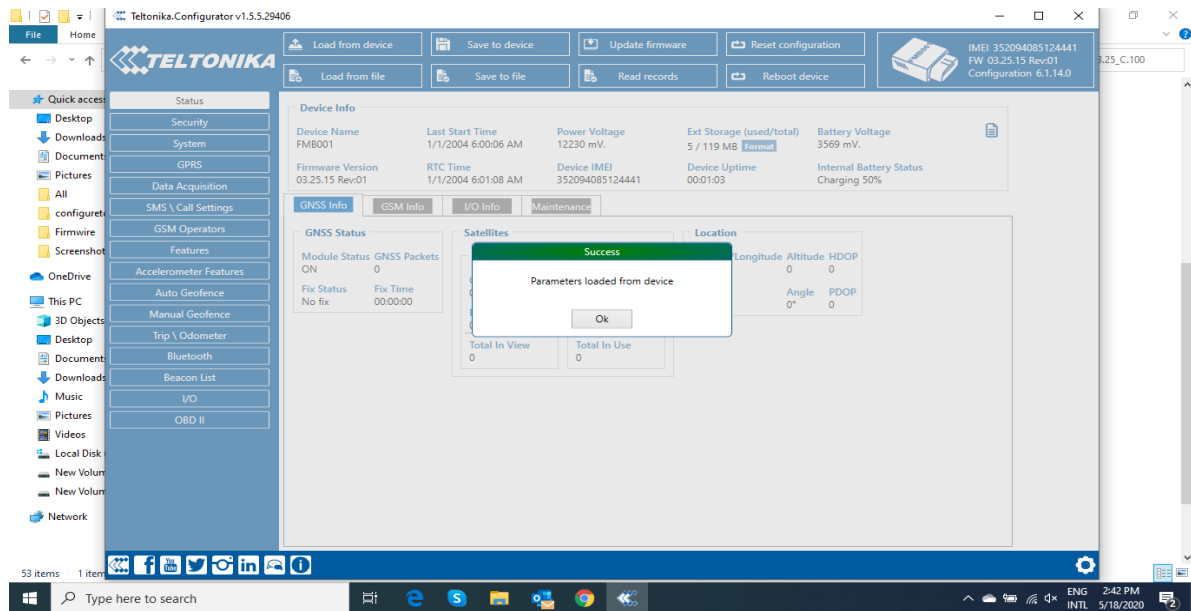


If you click on the status bar the display will be shown like the picture below:

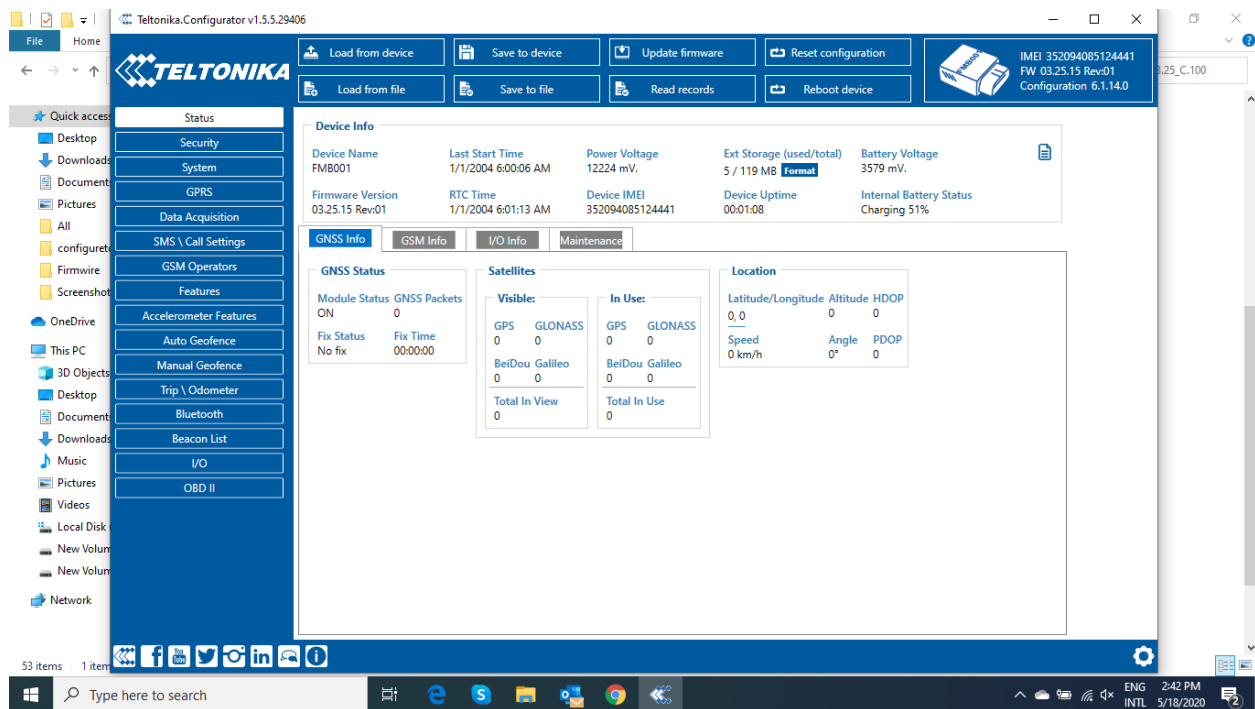


You can check various tracker information from left side bar:

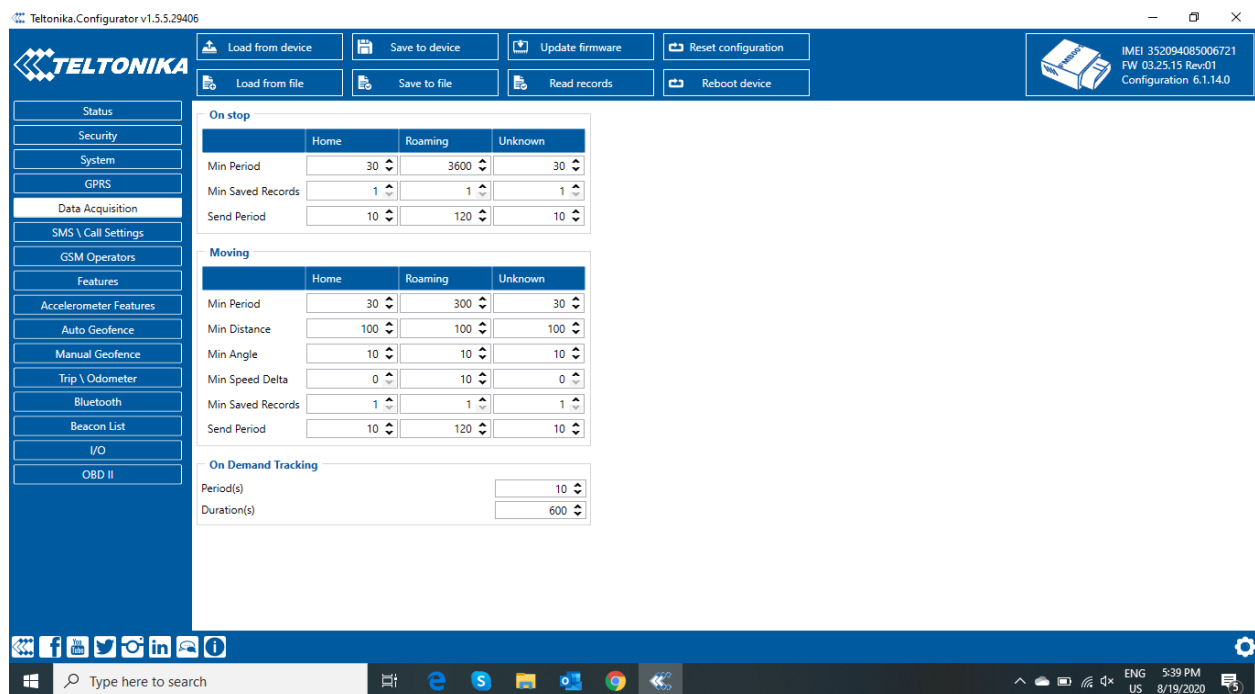



In Order to update the firmware click on “Update Firmware” as shown in the picture.

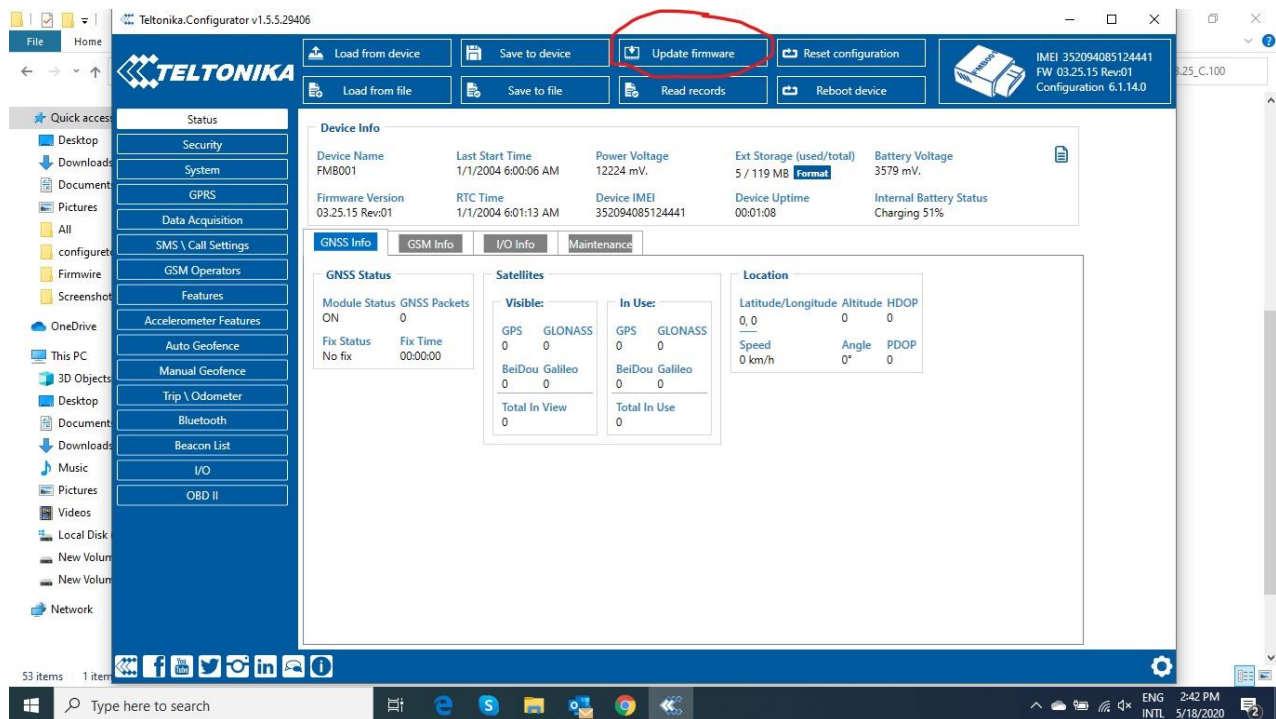


Select the firmware from the downloaded file and then click open.

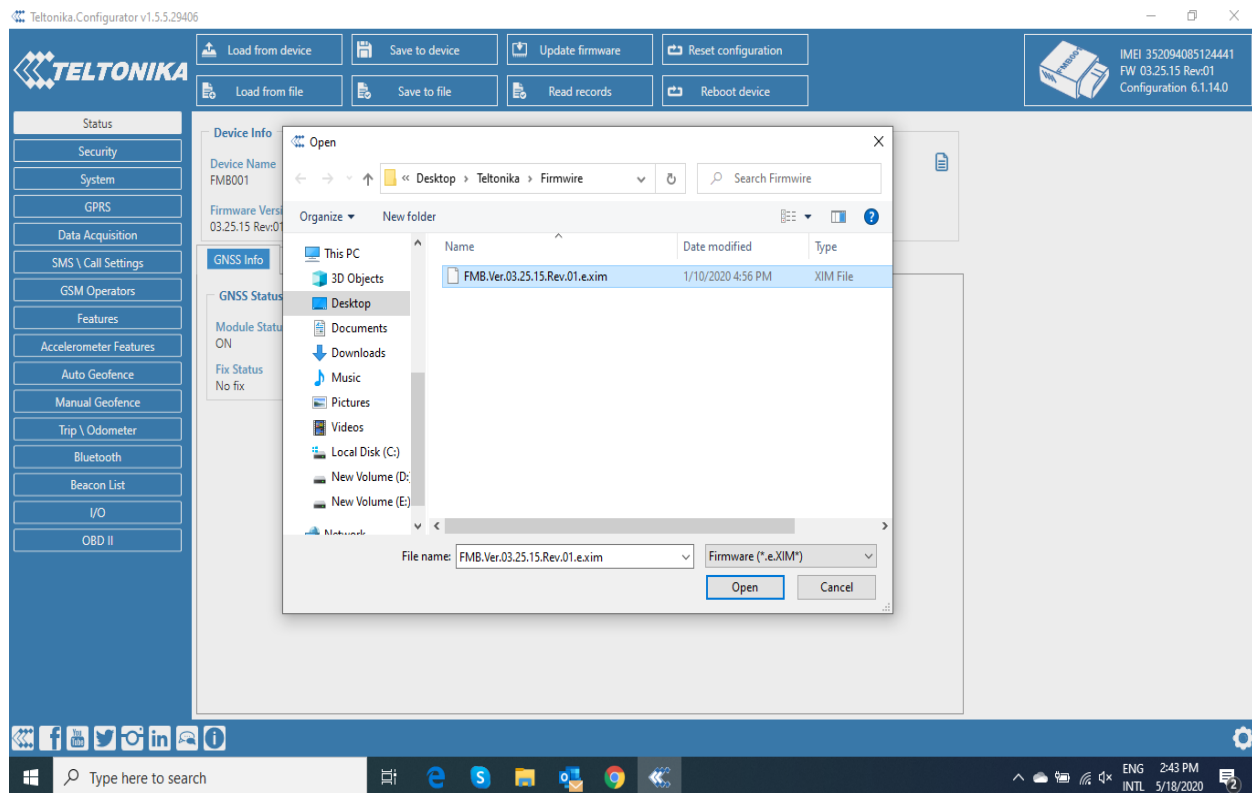


Click on the “yes” tab to confirm the firmware update. This may take a few minutes to update the firmware.

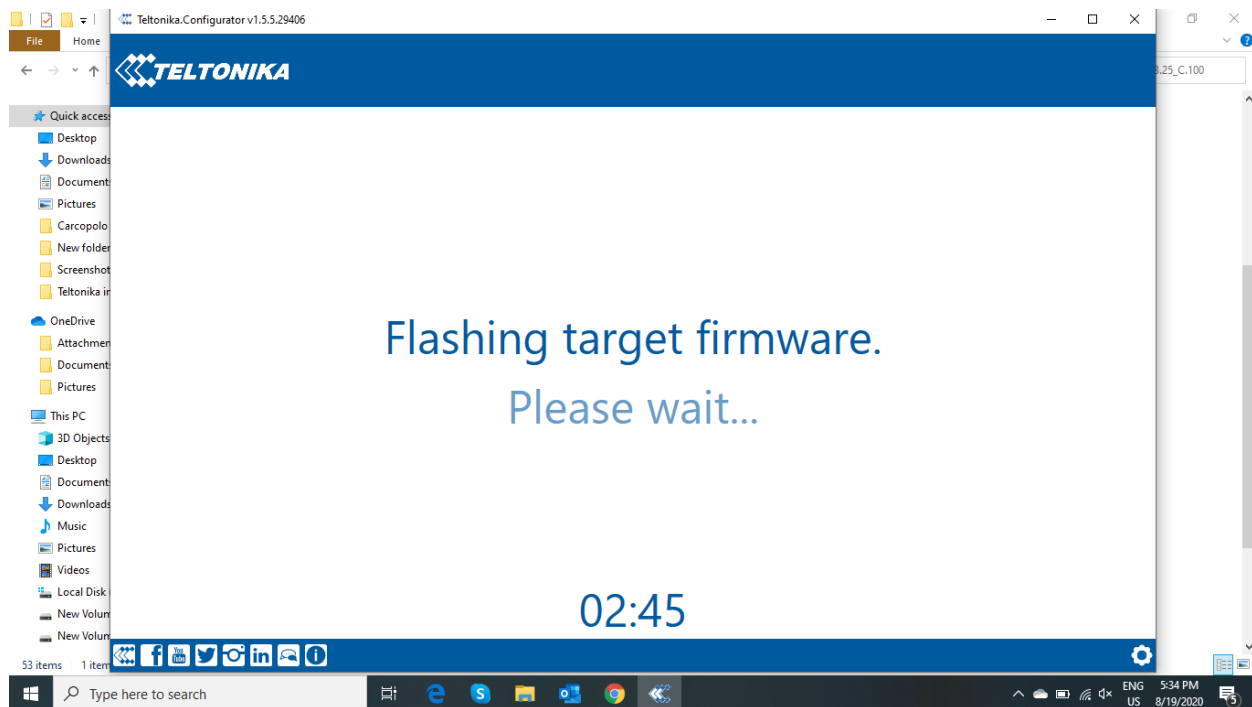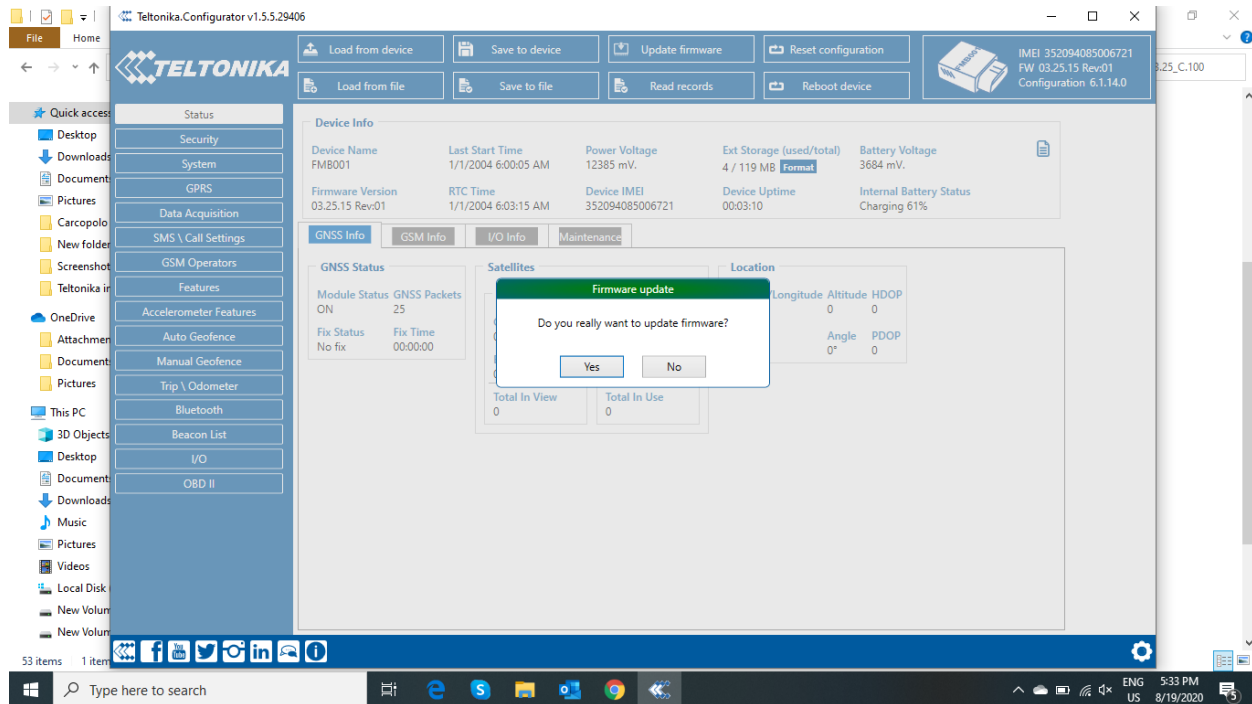


Now to update the parameters click on the “Load from Device” as shown in the picture.

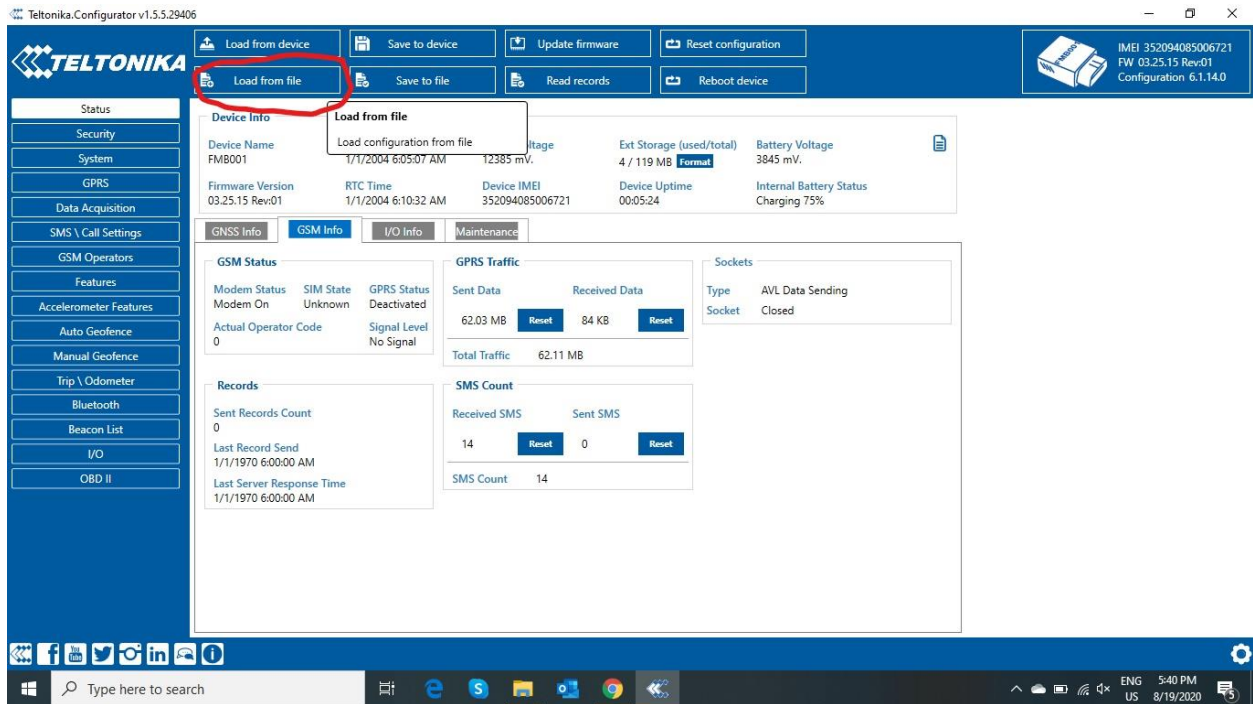

Then, select the latest parameters configurator from the downloaded file and then click open.

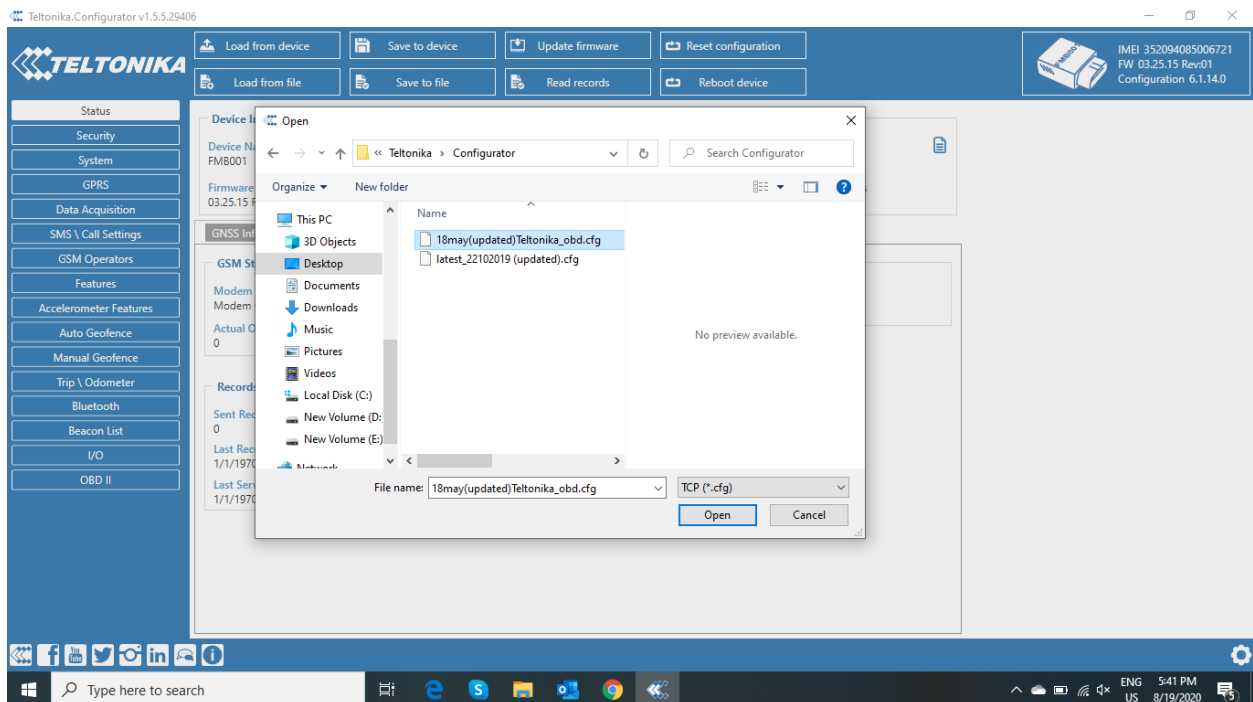

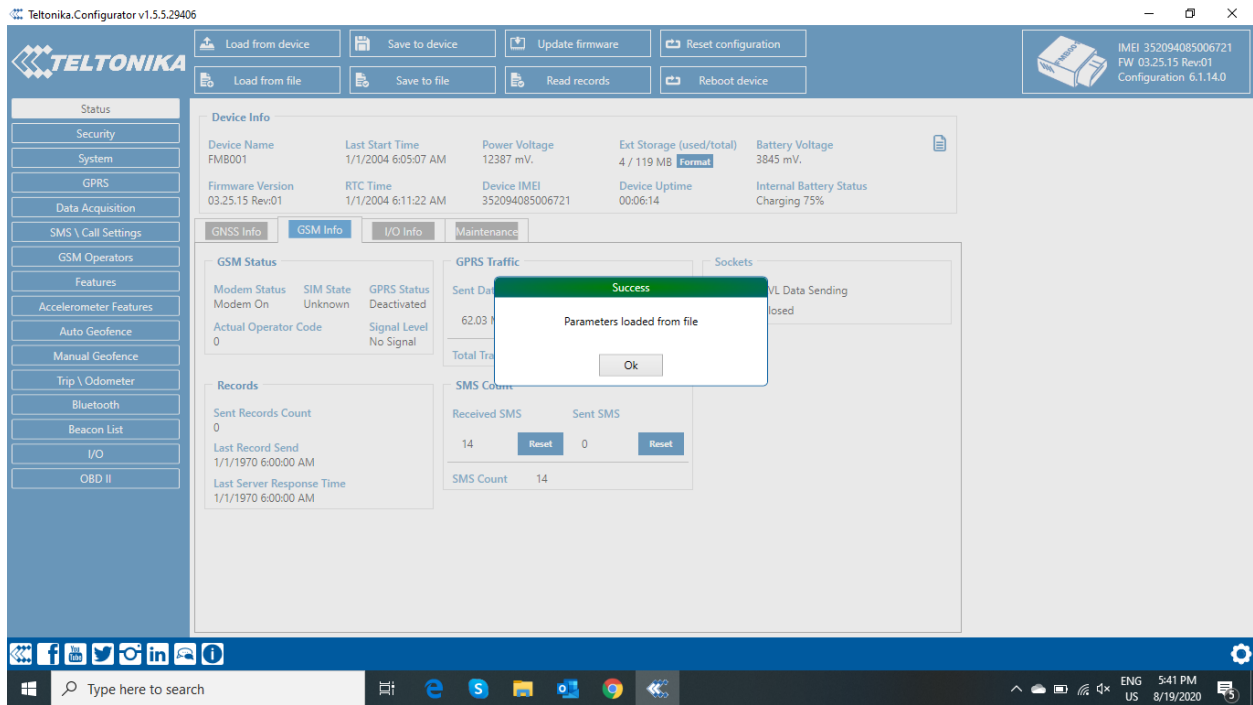

After performing above procedures click on the “save to device” tab to save those updated data into this device.

